

IX Series 2 - Timer Settings

Getting Started

The following guide will detail setting the door release, call-in and, communication timers within Support Tool. The following steps will show each setting's location, and give a simple example of adjusting it.

Door Release Output Timer

To adjust the amount of time the door release relay output activates, expand **Relay Input / Relay Output Settings** and click **Relay Output**.

Scroll Right →
Scroll Right →

Table View

Station View

- ⊞ Station Information
- ⊞ Network Settings
- ⊞ System Information
- ⊞ Call Settings
- ⊞ **Option Input / Relay Output Settings**
 - Option Input
 - Relay Output**
- ⊞ Paging Settings

Station Information					Option Input / Relay Output Settings		
Identification					Relay Output		
#	Number	Name	Location	Station Type	Relay Output 1	Relay Output 1 (Output Time is valid when Relay Output function is s	
					Option Relay Control	Output Time Range	Output Time
0001	0001	Master Stations1		IX-MV7-*	Disable	200-2000 [msec]	400
0002	0002	Master Stations2		IX-MV7-*	Disable	200-2000 [msec]	400
0003	0003	Master Stations3		IX-MV7-*	Disable	200-2000 [msec]	400
0004	0004	Video Stations1		IX-DV, IX-DVF(-*)	Disable	200-2000 [msec]	400
0005	0005	Video Stations2		IX-DV, IX-DVF(-*)	Disable	200-2000 [msec]	400
0006	0006	Audio Stations1		IX-SSA(-*)	Disable	3-600 [sec]	400
0007	0007	Handset Sub Station1		IX-RS-*	Disable	200-2000 [msec]	400
0008	0008	I/O Adaptor1		IXW-MA	Disable	200-2000 [msec]	400

Output Time Range and Output Time
 Use the drop-down menu under **Output Time Range** to select either **200-2000(msec)** or **3-600(sec)**, then use the **Output Time** section to enter the desired value.

Click **Update** to save the changes.

Upload
 ↑ Remember to upload the setting file to each station before testing. Refer to the last page for more information.

Call Timeout

To adjust the time a station will call-in to another station before ending, expand **Call Settings** and click **Call Origination**.

Table View

Station View

- ⊞ Station Information
- ⊞ Network Settings
- ⊞ System Information
- ⊞ **Call Settings**
 - Station Information
 - Called Stations (Master Station)
 - Called Stations (Door/Sub Station)
 - Call Origination**
 - Incoming Call
- ⊞ Option Input / Relay Output Settings

Station Information					Call Settings			
Identification					Call Origination			
#	Number	Name	Location	Station Type	Call Button	Call Timeout		
					Call Method	Ringback Tone	Select	10-600 sec
0001	0001	Master Stations1		IX-MV7-*		Call Pattern 4	10-600 sec	60
0002	0002	Master Stations2		IX-MV7-*		Call Pattern 4	10-600 sec	60
0003	0003	Master Stations3		IX-MV7-*		Call Pattern 4	10-600 sec	60
0004	0004	Video Stations1		IX-DV, IX-DVF(-*)	Standard Destination	Call Pattern 1	10-600 sec	60
0005	0005	Video Stations2		IX-DV, IX-DVF(-*)	Standard Destination	Call Pattern 1	10-600 sec	60
0006	0006	Audio Stations1		IX-SSA(-*)	Standard Destination	Call Pattern 1	10-600 sec	60
0007	0007	Handset Sub Station1		IX-RS-*	Standard Destination	Call Pattern 1	10-600 sec	60

Call Timeout
 Under **Call Timeout**, select the desired duration between 10 and 600 seconds.

Click **Update** to save the changes.

Upload
 ↑ Remember to upload the setting file to each station before testing. Refer to the last page for more information.

Talk Timeout

To adjust the amount of time a station will communication to another station before ending the call, expand **Station Settings** and click **Communication**.

Table View

Station View

- [-] Station Information
- [-] Network Settings
- [-] System Information
- [-] Call Settings
- [-] Option Input / Relay Output Settings
- [-] Paging Settings
- [-] Function Settings
- [-] Transfer Settings
- [-] Station Settings**
 - Speed Dials / Favorites
 - Privacy
 - Volume / Tone
 - Communication**
 - Monitor
 - Master Station Display
 - Camera

Station Information					Station Settings		
#	Identification				Communication		
	Number	Name	Location	Station Type	Talk Timeout [sec]		Communication Start Tone
0001	0001	Master Stations1		IX-MV7-*	30-600 sec	60	
0002	0002	Master Stations2		IX-MV7-*	30-600 sec	60	
0003	0003	Master Stations3		IX-MV7-*	30-600 sec	60	
0004	0004	Video Stations1		IX-DV, IX-DVF(-*)	30-600 sec	60	None
0005	0005	Video Stations2		IX-DV, IX-DVF(-*)	Infinite	60	None
0006	0006	Audio Stations1		IX-SSA(-*)	30-600 sec	60	None
0007	0007	Handset Sub Station1		IX-RS-*	30-600 sec	60	None

Talk Timeout

Use the drop-down menu under Talk Timeout to select either **Infinite** or **30-600 sec**, then use the 30-600 sec section to enter the desired value.

Click **Update** to save the changes.

Setting File Upload

From the top menu bar, click **File(F)** and select **Upload Settings to Station**.

File(F) Edit(E) Language(V) Tools(T) Help(H)

- Create New System
- Select Existing System
- Delete Existing System
- Update Settings
- Download Settings From Station
- Upload Settings To Station
- Upload SSL Certificate
- Import Setting File
- IX Support Tool Export System Configuration
- Export to Line Supervision Software
- Exit

Setting File Upload

Select the station(s) to upload the Setting File(s):

Station List					
Select	Number	Name	Location	Station Type	Status
<input checked="" type="checkbox"/>	0001	Master Stations1		IX-MV7-*	-
<input checked="" type="checkbox"/>	0002	Master Stations2		IX-MV7-*	-
<input checked="" type="checkbox"/>	0003	Master Stations3		IX-MV7-*	-
<input checked="" type="checkbox"/>	0004	Video Stations1		IX-DV, IX-DVF(-*)	-
<input checked="" type="checkbox"/>	0005	Video Stations2		IX-DV, IX-DVF(-*)	-
<input checked="" type="checkbox"/>	0006	Audio Stations1		IX-SSA(-*)	-

Select Station by Type:

All

Select file type to be uploaded

Select Stations

Use the drop-down menu under Select Station by Type and chose **All**, then click **Select**.

Settings

Click **Settings** to upload the configuration settings to each station.