


# TW-SERIES INSTALLATION TEMPLATE

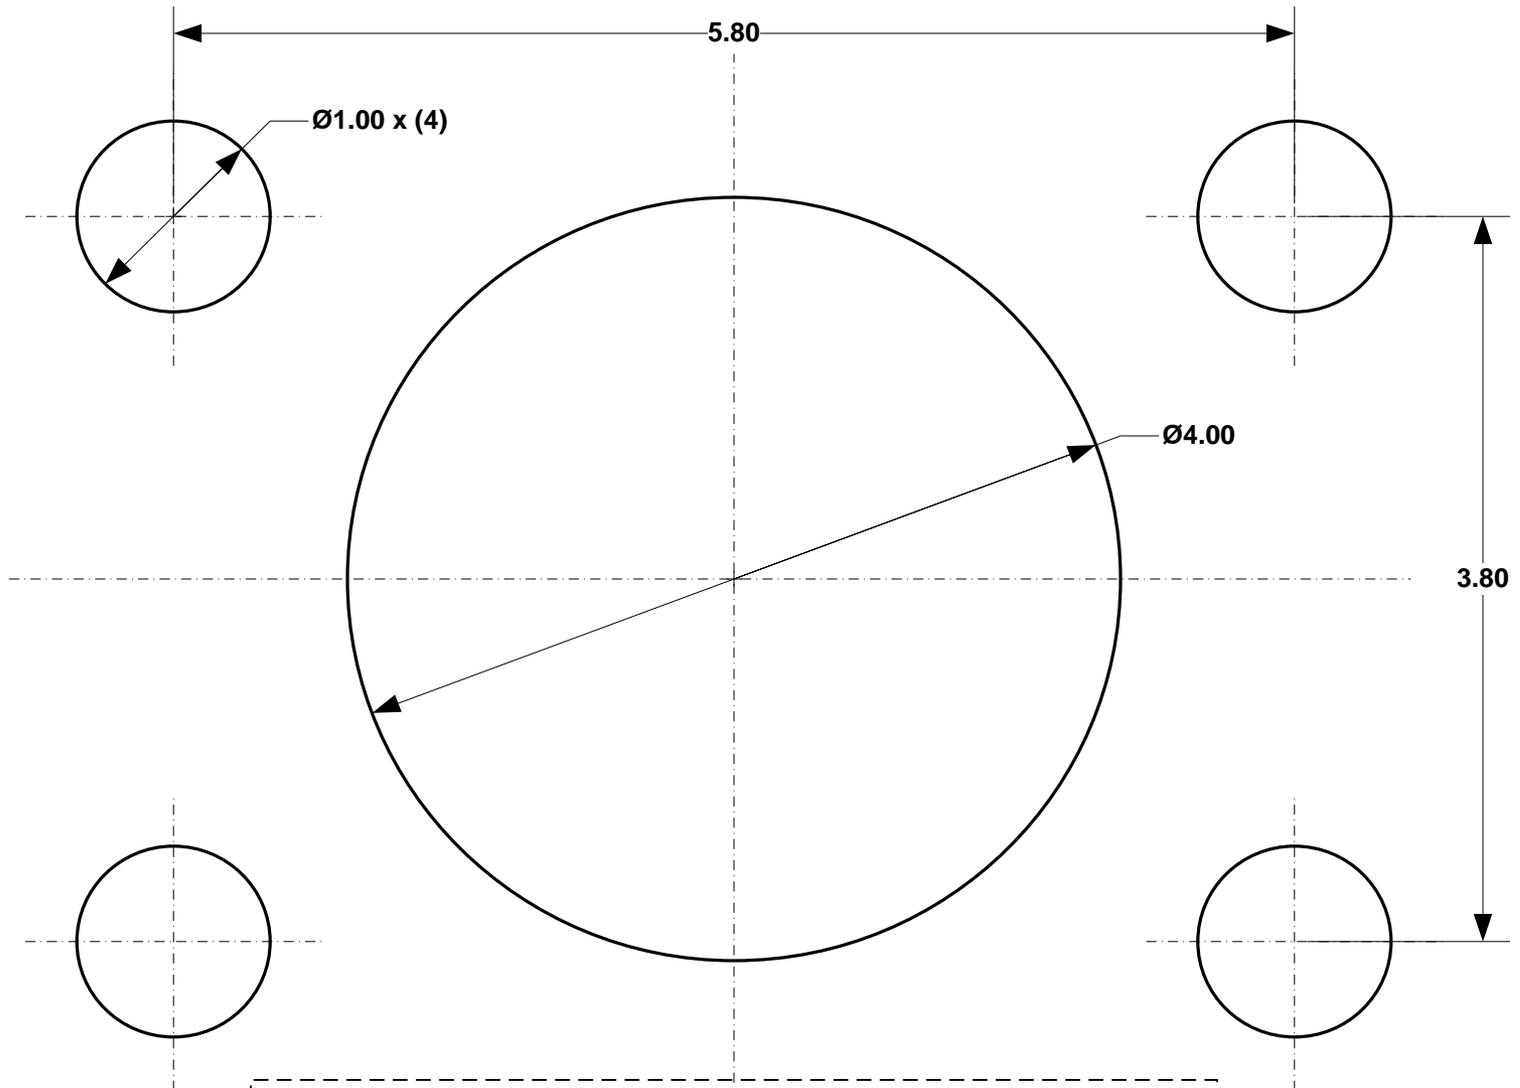

**NOTE:** It is recommended to transfer this template to a piece of wood ( $\frac{1}{2}$ " to 1" thickness) to ensure proper anchor bolt placement.